


MONTAGE

TIC45 / TIC48




SIMPSON

Strong-Tie

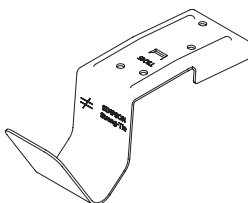

TIC45 / TIC48

MONTAGE:

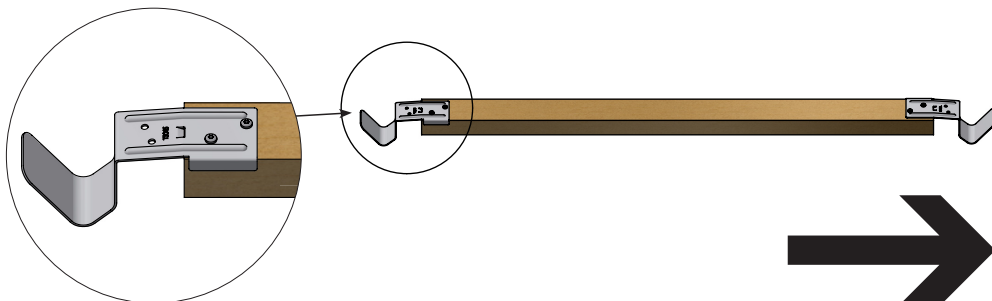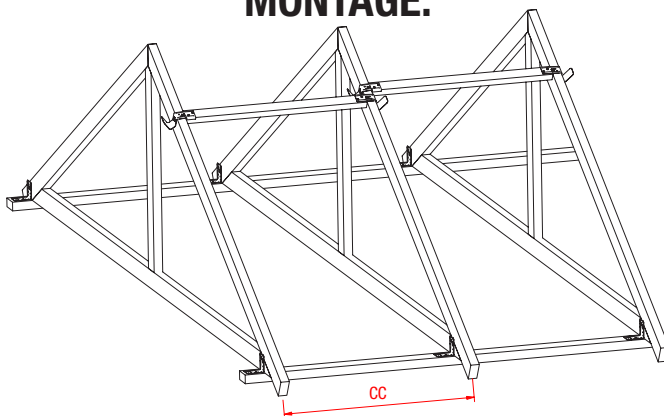


MONTAGE

TIC45 / TIC48

SIMPSON

Strong-Tie

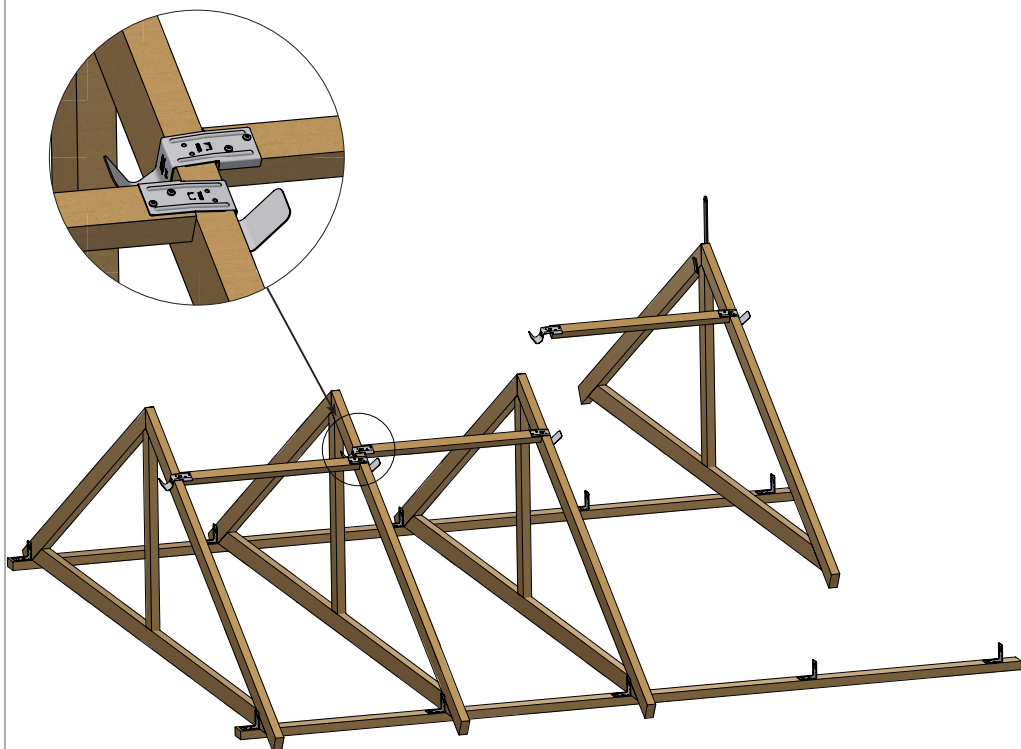

DK: NB. Ved montering af undertag af banevarer anbefales det at afmontere TIC-beslaget.

NO: NB. Ved bruk av duk som undertak, anbefales det å demontere TIC beslaget.

SE: OBS! Vid montering av kondensväv eller liknande rekommenderas att TIC-beslaget demonteras.

EN: Note: When installing a membrane-type underlay, it is recommended to remove the TIC connector.

